



D Montageanweisung
F Instructions d'installation
I Istruzioni di montaggio
NL Installatievoorschrift
DK Installationsinstruktus
N Installationsinstruktioner
FIN Asennusohje
S Installationsinstruktioner
E Instrucciones de montaje

ML7420A6009/6017
Electric Linear Valve Actuators


INSTALLATION INSTRUCTIONS

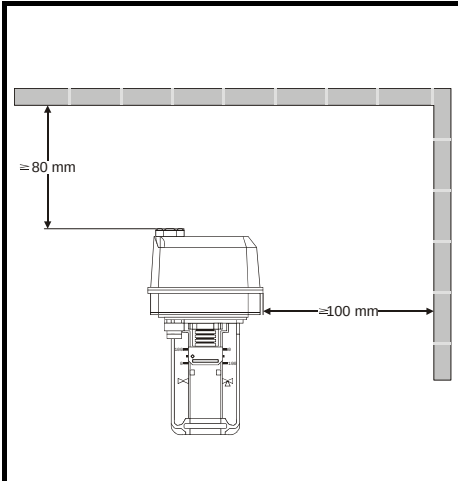

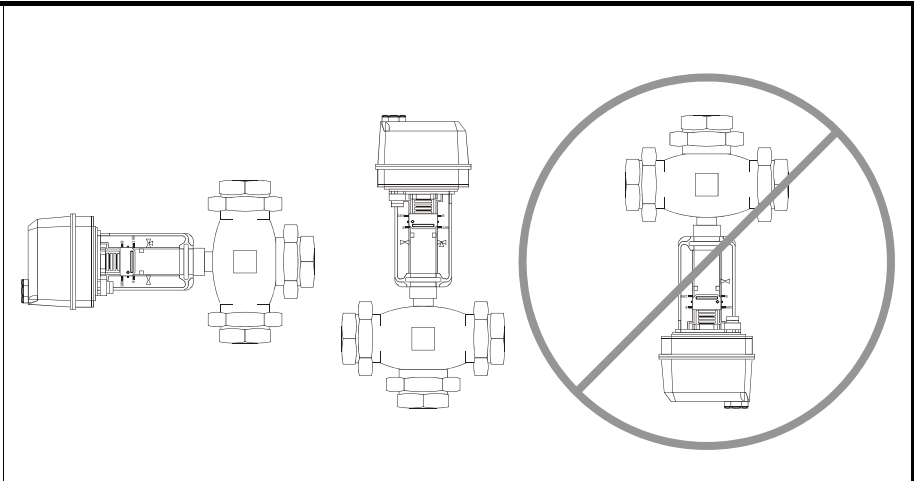


A1-A6: Installation


mounting
D Einbau
F montage
I montaggio
NL montage
DK montere
N monterings
FIN asentaminen
S montera
E montaje

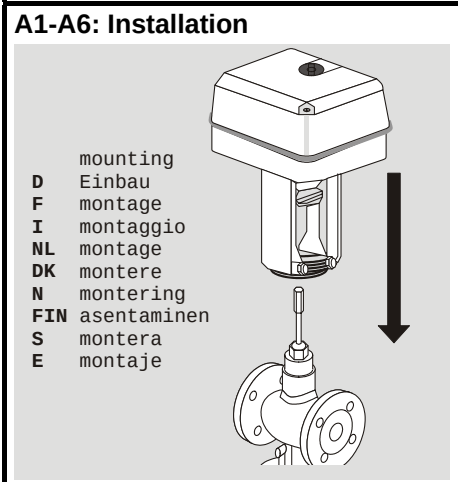


A1

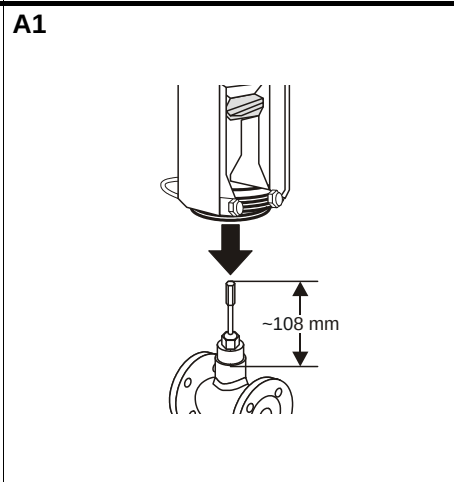

A2

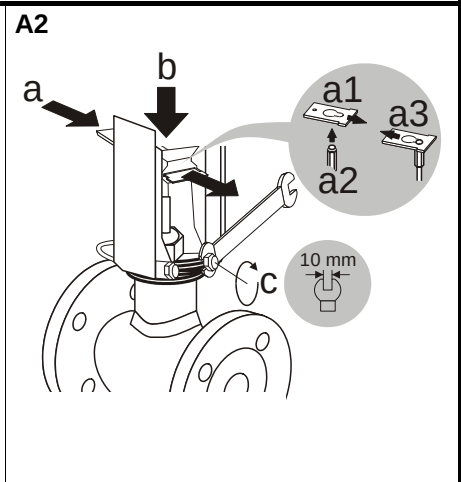


A3

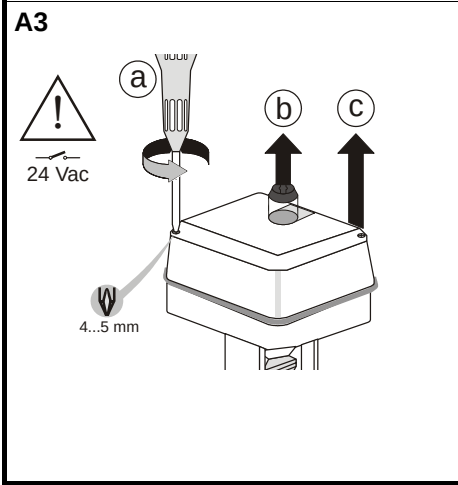


A4

position	
Y	0(2)...10 V 2...10 V
↓	
24 V ↓	24 V ↓
24 V ~	24 V ~
1 ↓	
2 ↑	

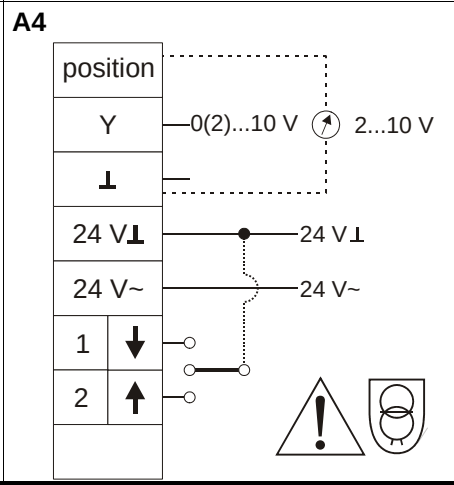


A5a

W3

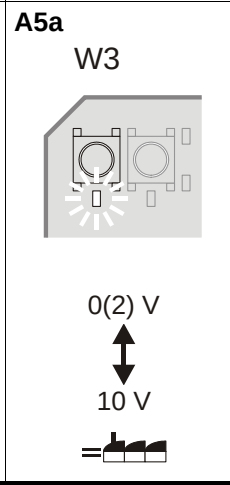

0(2) V
↑
10 V


W3

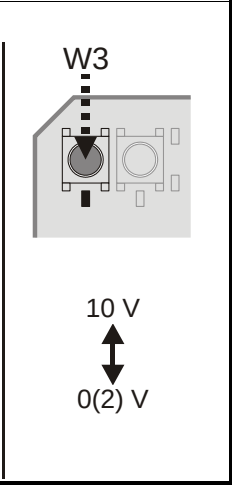

10 V
↑
0(2) V

A5b


W2

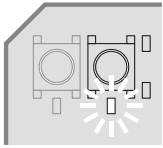

0 ... 10 V




W2

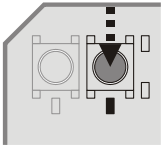

2 ... 10 V


A5c

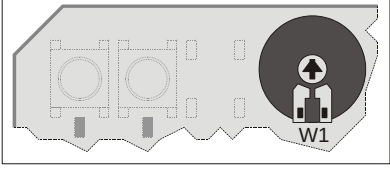


W1



 0% 50% 100%




W1

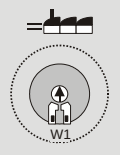



W1

A6

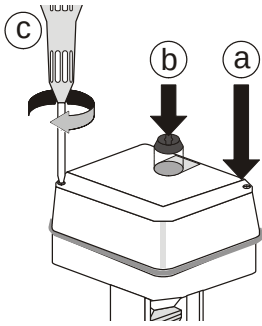


24 Vac

B: Manual

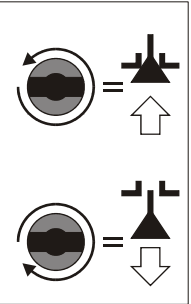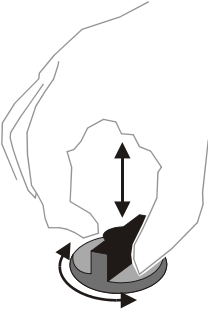


C1-2: Dismounting

dismounting
D Ausbau
F démontage
I smontaggio
NL demontage
DK afmontere
N demontere
FIN purkaminen
S nedmontera
E desmontaje

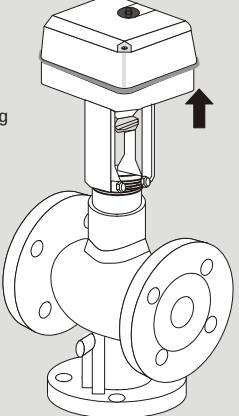

C1

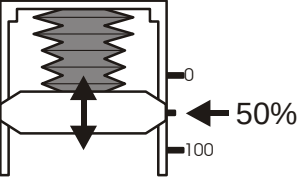

C2

A3→A4→A2→A1

