



SF Asennusohje
S Installation instruktioner
N Installationsinstruktioner
DK Installationsinstruktus
NL Installatievoorschrift
D Montageanweisung
F Instructions d'installation
ES Instrucciones de montaje
I Istruzioni di montaggio

ML6425A,B

Electric Linear Valve Actuator


INSTALLATION INSTRUCTIONS

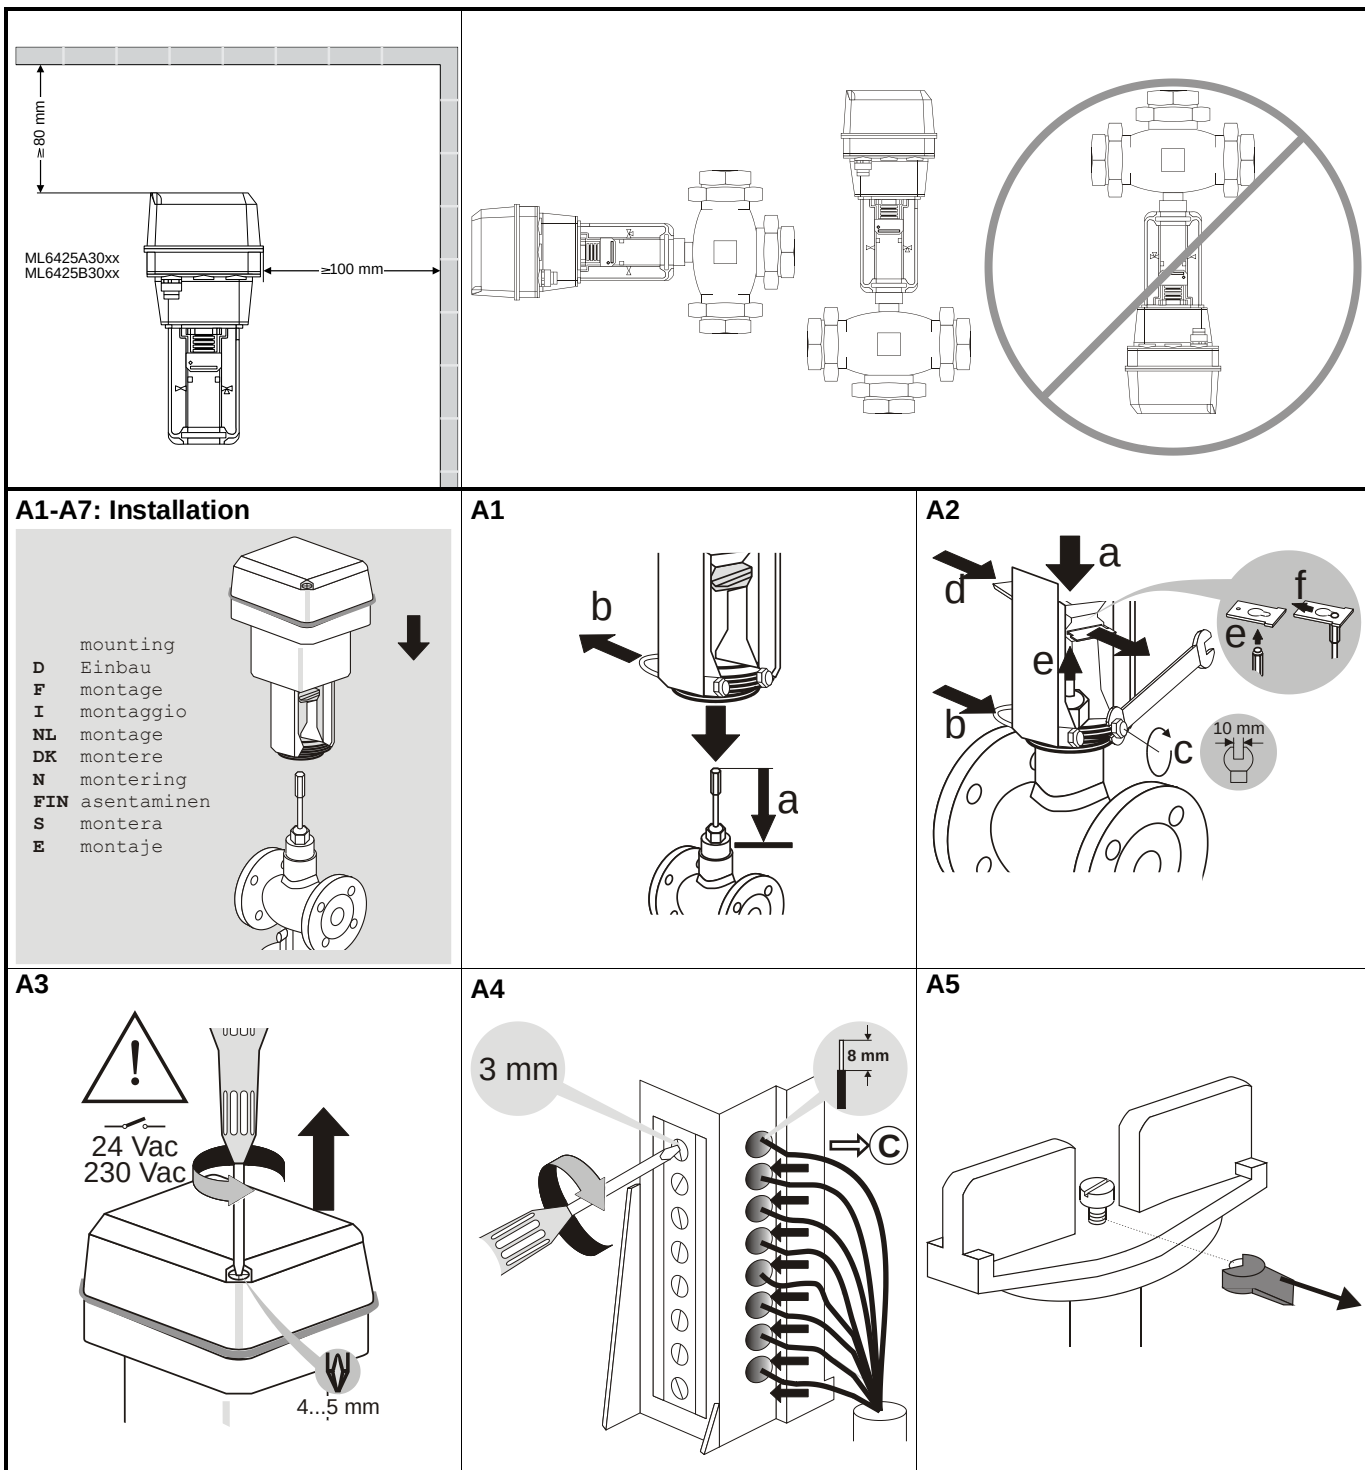

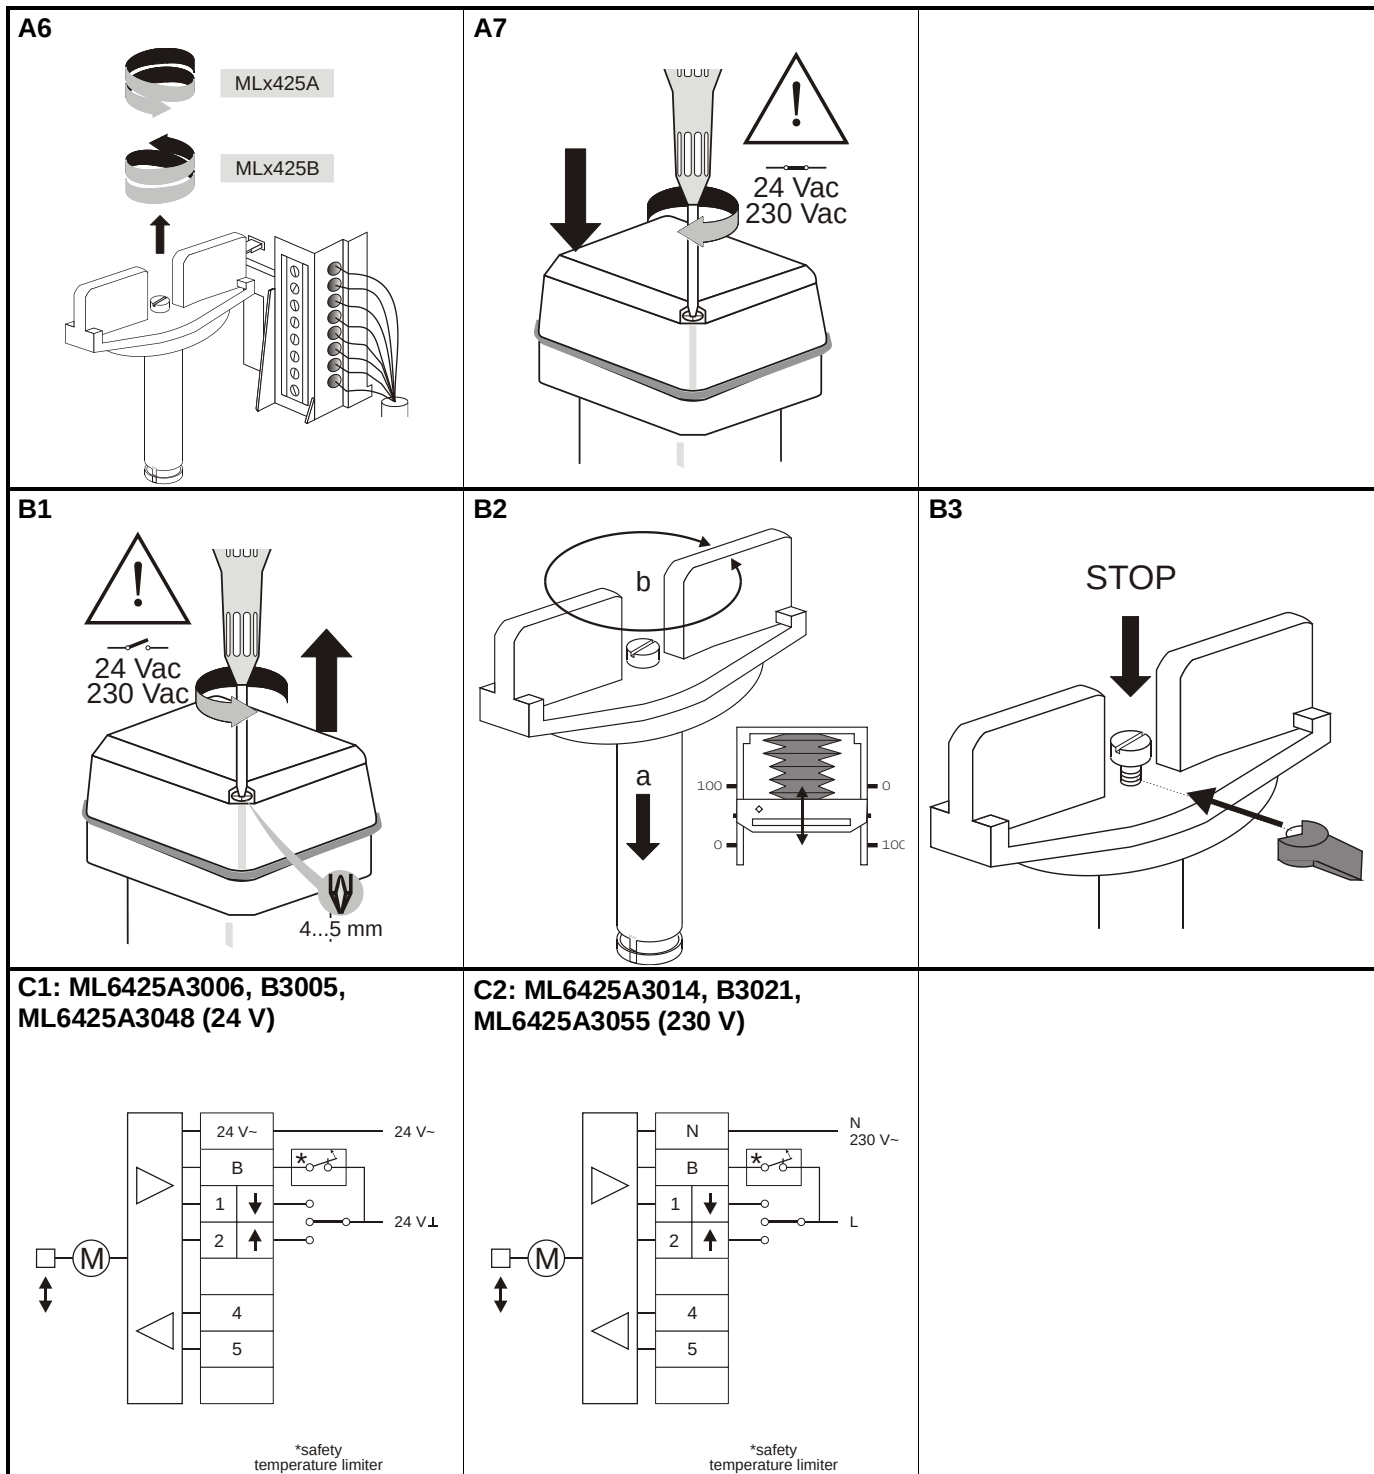


D: Dismounting


dismounting
D Ausbau
F démontage
I smontaggio
NL demontage
DK afmontere
N demontere
FIN purkaminen
S nedmontera
E desmontaje

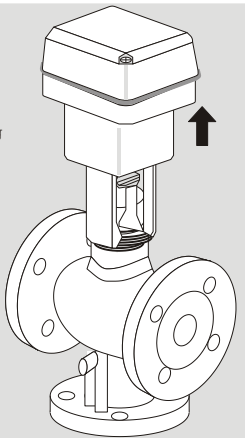


D1

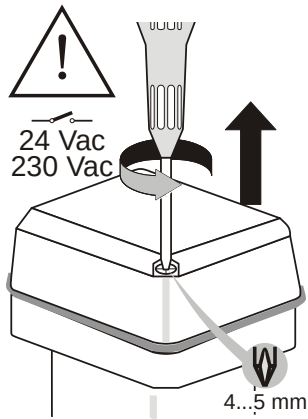


D2

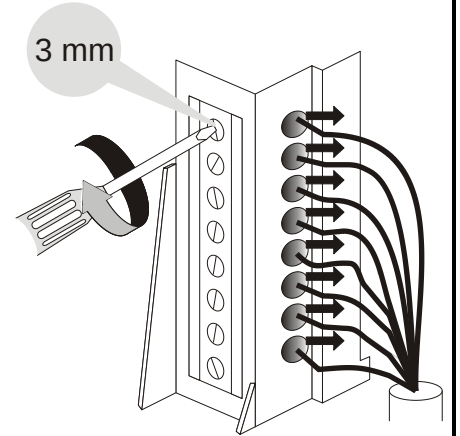

D3

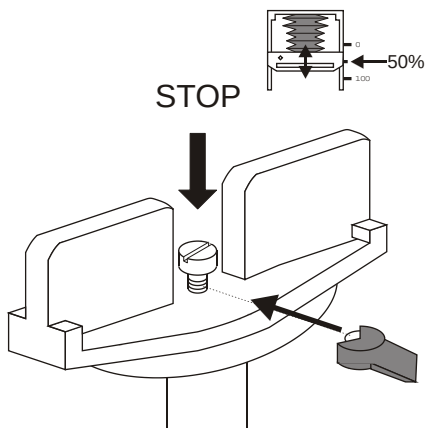

D4

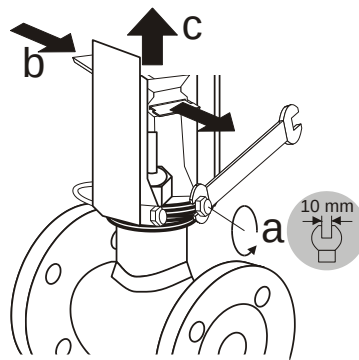

Home and Building Technologies

Honeywell GmbH
Böblinger Strasse 17
71101 Schönaich, Germany

MU1B-0235GE51 R0821F

Subject to change without notice.