


SF Asennusohje
S Installation instruktioner
N Installationsinstruktioner
DK Installationsinstruktus
NL Installatievoorschrift
D Montageanweisung
F Instructions d'installation
ES Instrucciones de montaje
I Istruzioni di montaggio


ML6425A,B

Electric Linear Valve Actuator


INSTALLATION INSTRUCTIONS

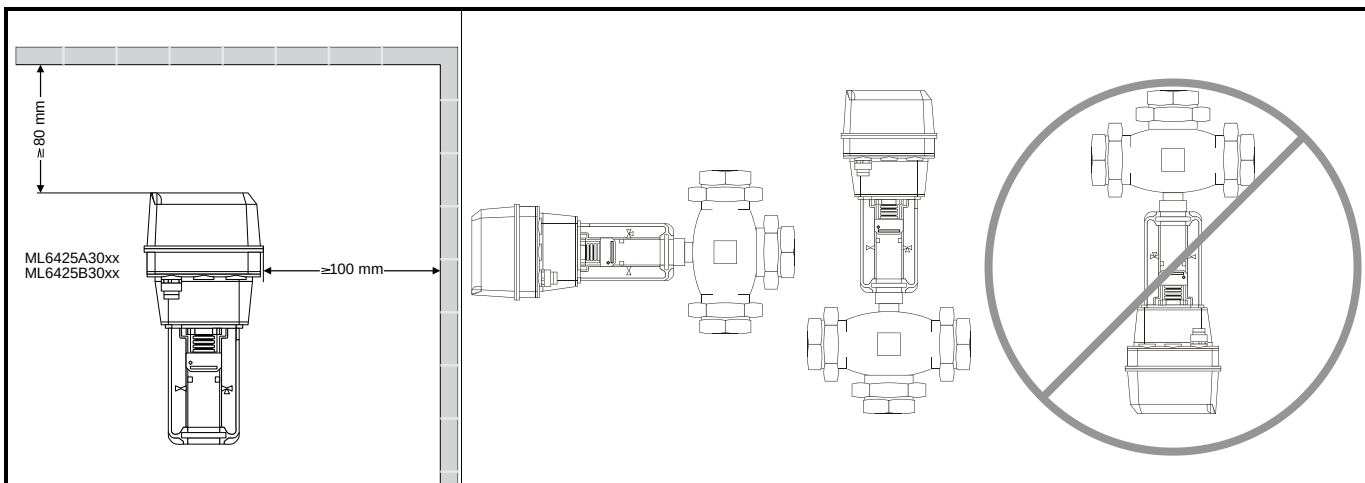


A1-A7: Installation

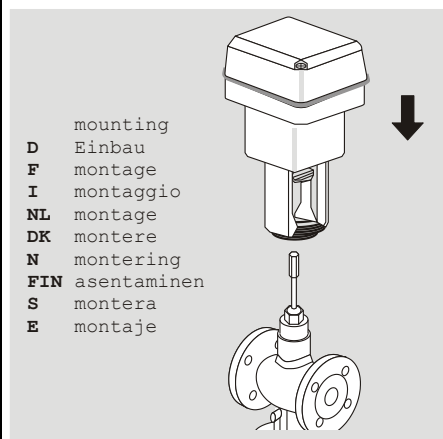


A1

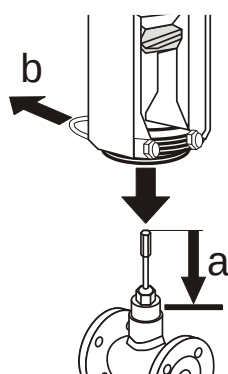


A2

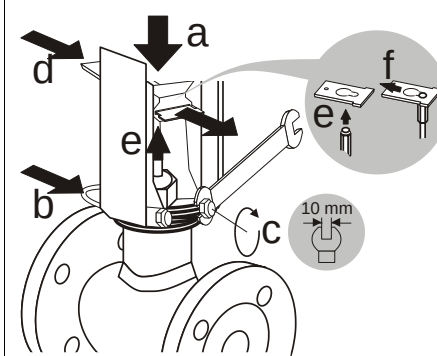


A3

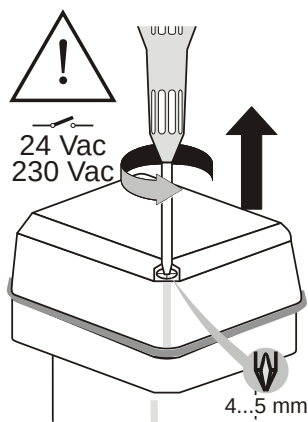


A4

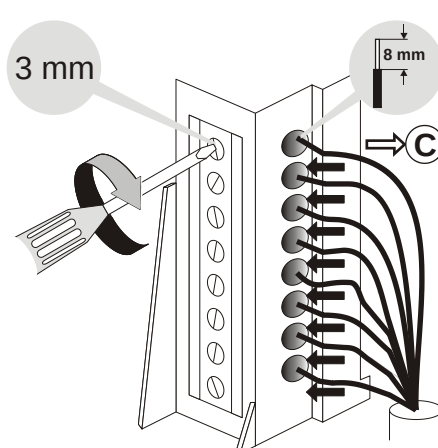


A5

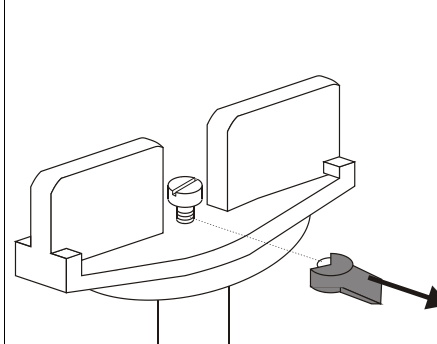

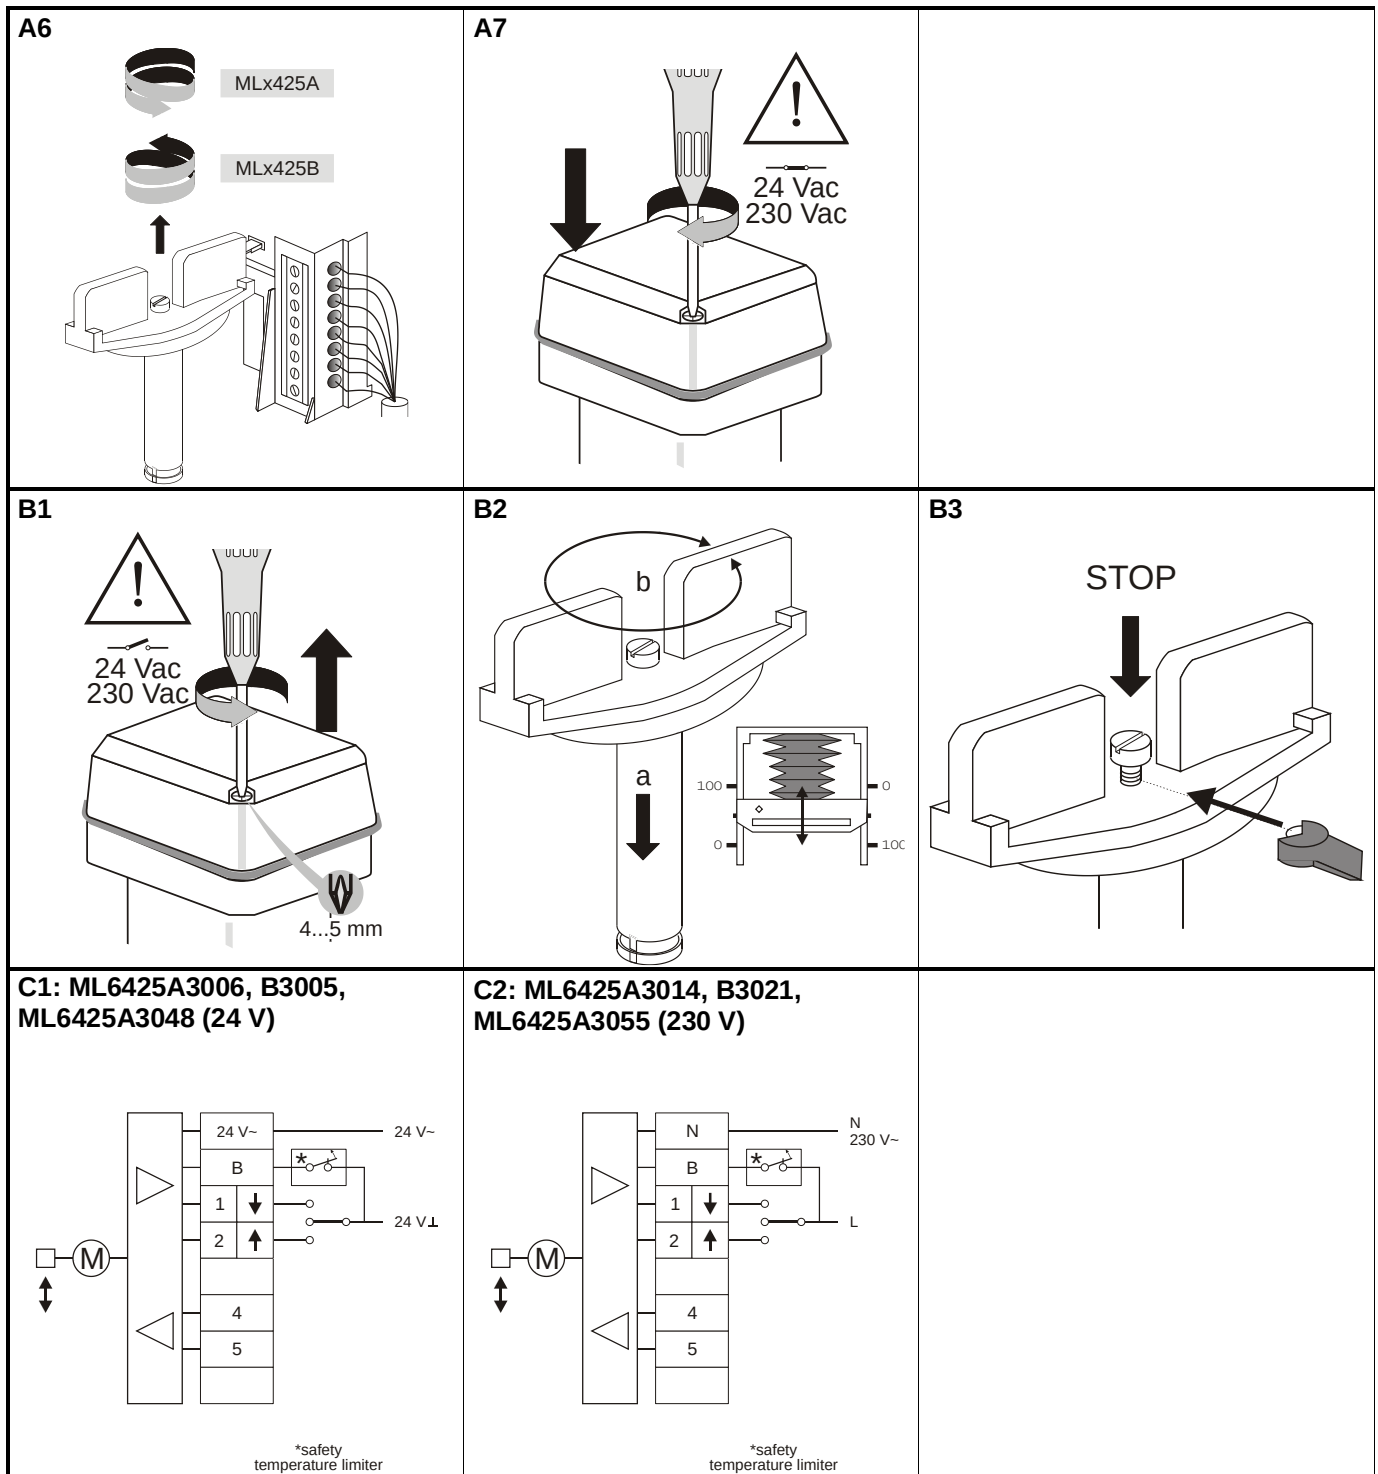


D: Dismounting


dismounting
D Ausbau
F démontage
I smontaggio
NL demontage
DK afmontere
N demontere
FIN purkaminen
S nedmontera
E desmontaje

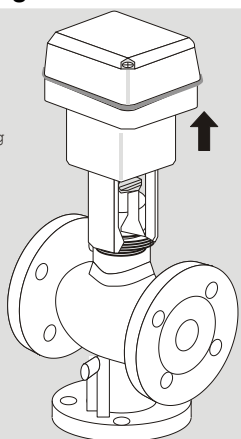


D1

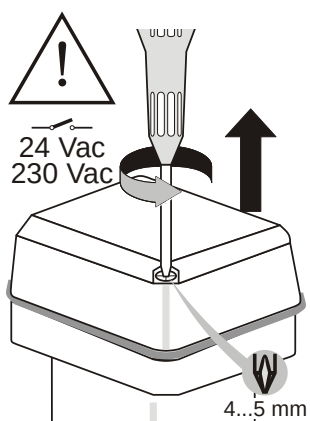


D2

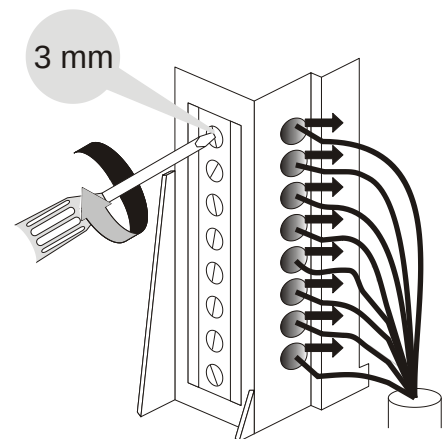

D3

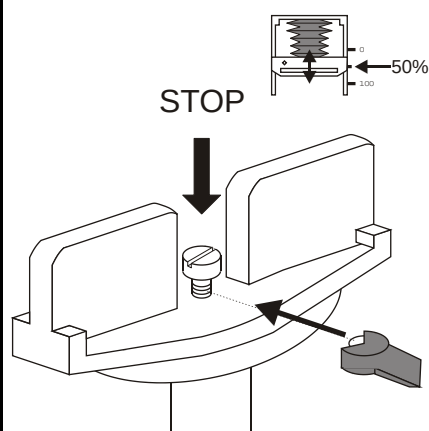

D4

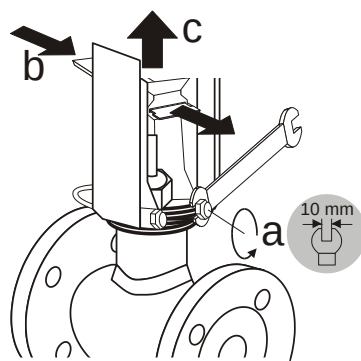



Manufactured for and on behalf of the Connected Building Division of Honeywell Products and Solutions SARL, Z.A. La Pièce, 16, 1180 Rolle, Switzerland by its Authorized Representative:

Home and Building Technologies

Honeywell GmbH
Böblinger Strasse 17
71101 Schönaich, Germany

MU1B-0235GE51 R0821F

Subject to change without notice.