


- D Montageanweisung
- F Instructions d'installation
- I Istruzioni di montaggio
- NL Installatievoorschrift
- DK Installationsinstruktus
- N Installationsinstruktioner
- FIN Asennusohje
- S Installation instruktioner
- E Instrucciones de montaje

## ML7420A6009/6017

### Electric Linear Valve Actuators

#### INSTALLATION INSTRUCTIONS

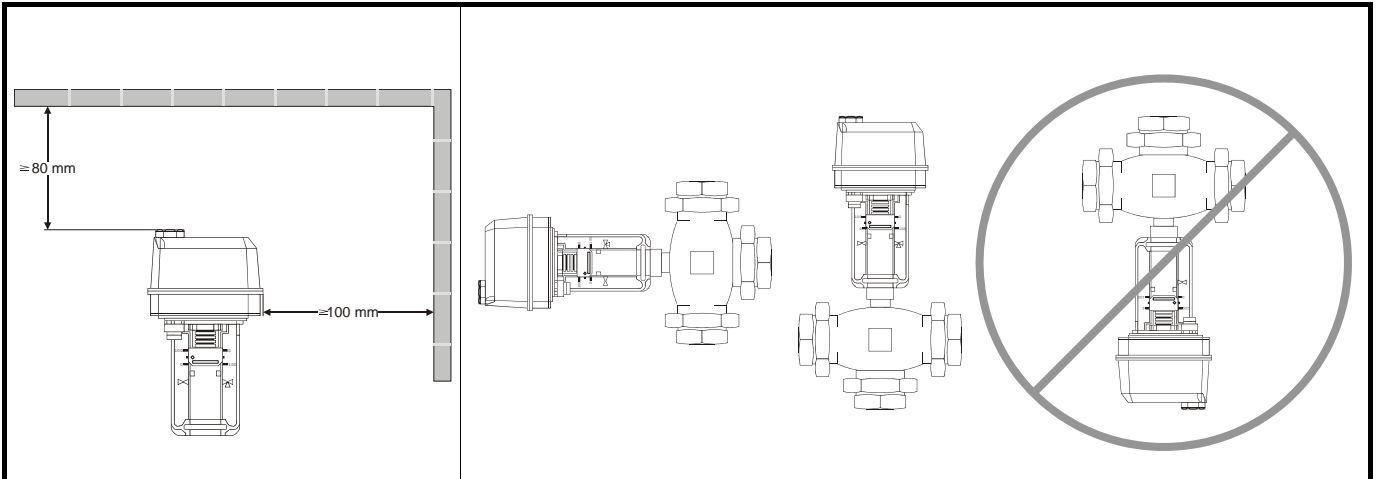

**A1-A6: Installation**

- mounting
- D Einbau
- F montage
- I montaggio
- NL montage
- DK montere
- N montering
- FIN asentaminen
- S montera
- E montaje

**A1**

**A2**

**A3**

24 Vac

4...5 mm

**A4**

position	0(2)...10 V	2...10 V
Y	—	—
↓	—	—
24 V↓	—	24 V↓
24 V~	—	24 V~
1 ↓	—	—
2 ↑	—	—

**A5a**

W3

0(2) V

10 V

W3

10 V

0(2) V

**A5b**

0 ... 10 V

**A5c**

0%  
50%  
100%

**A6**

24 Vac

**B: Manual**

**C1-2: Dismounting**

dismounting  
 D Ausbau  
 F démontage  
 I smontaggio  
 NL demontage  
 DK afmontere  
 N demontere  
 FIN purkaminen  
 S nedmontera  
 E desmontaje

**C1**

0  
50%  
100%

**C2**

A3 → A4 → A2 → A1