LCD Digital Timers (Indicator)

LE8N Series

INSTRUCTION MANUAL

TCD210137AD

Autonics

Thank you for choosing our Autonics product.
Be sure to read and fully understand the instruction manual and other manuals before using the product.
For your safety, read and follow the safety precautions, warnings, cautions, and handling instructions listed in the instruction manual, other manuals, and the Autonics website.
Keep this document in a location where it can be easily accessed.

Visit the Autonics website (www.autonics.com or QR code) for the latest information. Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

Safety Precautions

- 'Safety Precautions' are provided to ensure safe and proper use of the product and to prevent accidents or hazards. Please make sure to follow them carefully.
- ⚠ symbol indicates a caution, warning of potential hazards under certain conditions.

⚠ Warning Failure to follow instructions may result in serious injury or death.

01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
02. Do not use or store the unit in the place where flammable/explosive/ corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
Failure to follow this instruction may result in explosion or fire.
03. Install on a device panel to use.
Failure to follow this instruction may result in fire.
04. Do not connect, repair, or inspect the unit while connected to a power source.
Failure to follow this instruction may result in fire.
05. Check 'Connections' before wiring.
Failure to follow this instruction may result in fire.
06. Do not disassemble or modify the unit.
Failure to follow this instruction may result in fire.
07. Since Lithium battery is embedded in the product, do not disassemble or burn the unit.
Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

01. When connecting the power/sensor input and relay output, use AWG 20 (0.50 mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N m.
Failure to follow this instruction may result in fire or malfunction due to contact failure.
02. Use the unit within the rated specifications.
Failure to follow this instruction may result in fire or product damage.
03. Use a dry cloth to clean the unit, and do not use water or organic solvent.
Failure to follow this instruction may result in fire.
04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.
Failure to follow this instruction may result in fire or product damage.

Cautions During Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
  Do not use near the equipment which generates strong magnetic force or high frequency noise.
- LCD performance may vary depending on the usage environment. Check the environmental conditions, and do not install the device in places where direct sunlight or high temperatures may be present.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website.

LE8N - ❶ ❷ - ❸

❶ Power
B: Built-in lithium battery

❷ Input method
N: no-voltage input
V: voltage input
F: free voltage input


❸ Backlight
No-mark: none
L: Backlight function

Product Components


- [No-voltage input / Voltage input model] Product (+ bracket, rubber waterproof ring)
- [Free voltage input model] Product (+ bracket, rubber waterproof ring, terminal cover)
- Instruction manual

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.



■ Bracket

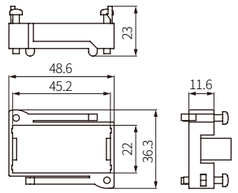


■ Panel cut-out

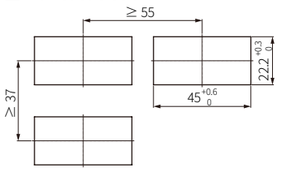

Connections


Use reliable contacts enough to flow 3 VDC⎓ 5 μA of current.

■ LE8N-BN

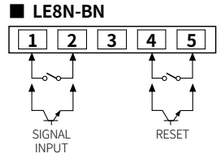


- Terminals no. 2, 5 are connected inside. (non-insulated)

■ LE8N-BN-L

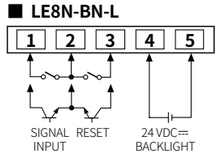


- Terminals no. 1, 2, 3 and no. 4, 5 are insulated inside.

■ LE8N-BV

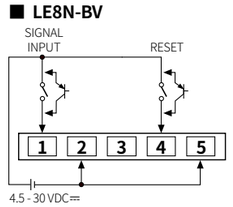


- Terminals no. 2, 5 are connected inside. (non-insulated)

■ LE8N-BV-L

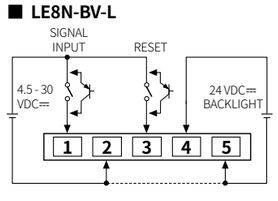

- Terminals no. 1, 2, 3 and no. 4, 5 are insulated inside.
- BACKLIGHT power is available as signal input (SIGNAL INPUT, RESET).

■ LE8N-BF

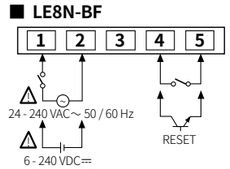


- Terminals no. 1, 2 and no. 4, 5 are insulated inside.

Specifications

Model	LE8N-BN	LE8N-BN-L	LE8N-BV	LE8N-BV-L	LE8N-BF
Display digits	8-digit				
Display method	LCD Zero Blanking (character size: W 3.4 × H 8.7 mm)				
Operation method	Count up				
Time range	0 to 99999999				
Error	Time / Temp.: ± 0.01%				
Input method	No-voltage input		Voltage input		Free voltage input
Counting input (H)	Short Residual voltage: ≤ 0.5 VDC⎓ Max. impedance: ≤ 10 kΩ		4.5 - 30 VDC⎓		24 - 240 VAC~ / 6 - 240 VDC⎓
Counting input (L)	Open Min. impedance: ≥ 750 kΩ		0 - 2 VDC⎓		0 - 2 VAC~ / 0 - 2.4 VDC⎓
RESET input	No-voltage input		Voltage input		No-voltage input
Min. signal width	SIGNAL INPUT, RESET: ≥ 20 ms				
Unit weight (packaged)	≈ 50 g (≈ 96 g)				
Certification	CE cULus EAC				

Power supply	Built-in battery (CR2477)
Battery life	≥ 10 years (at ≈ 20 °C)
Backlight power	24 VDC⎓ ± 10%
Insulation resistance	≥ 100 MΩ (500 VDC⎓ megger)
Dielectric strength	Between the charging part and the case: 2,000 VAC~ at 50 / 60 Hz for 1 min
Vibration	0.75 mm double amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 1 hour
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 10 min
Shock	300 m/s² (≈ 30 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s² (≈ 10 G) in each X, Y, Z direction for 3 times
Ambient temperature	-10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)
Protection structure	IP66 (front part, when using the rubber waterproof ring, IEC standard)


Detach the Case

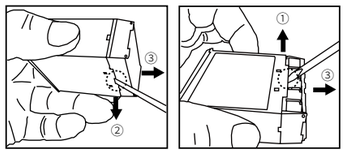

- Pull the terminal block in direction ③ and use a tool to lift the lock parts at the top and bottom (①, ②) to detach the case.

⚠Be careful not to injure yourself when using tools.

Replace the Battery

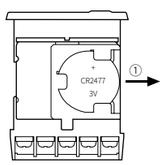

- Detach the case and pull the battery (CR2477) toward direction ① to detach from the product.
- Insert a new battery with the correct alignment of polarity.

■ Cautions when using the lithium battery


- Do not charge, short-circuit, disassemble, shock, or heat the battery.
- Check the polarity.
- Do not solder on a battery directly.
- Insulate a battery with tape to dispose.
- Do not store this unit in the place with the direct sunlight, high temperature and humidity.

DIP Switch Setting

- How to change the settings
  : change settings → press [RESET] key or input RESET signal (≥ 20 ms) to the external terminal.

■ SW1


- Set the enable or disable [RESET] key on the front panel.



Setting	Use [RESET] key
1	Use (defaults)
1	Not used


■ SW2, SW3

- Set the time range.
- Detach the case first and change the SW3 setting. Refer to the 'Detach the Case.'

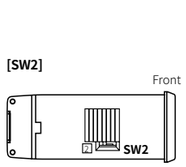

SW2 \ SW3	TS1	TS2	TS3
2	hour min 999999.59 (defaults)	sec 99999999	hour 999999.9h
2	hour min 99999.59.9	day hour 9999d23.9	hour min 99999h59
2	hour min sec 9999.59.59	day hour min 9999.23.59	hour min 9999h59.9

Time Operation

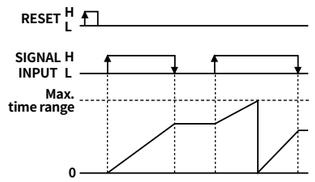

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002
www.autonics.com | +82-2-2048-1577 | sales@autonics.com

Autonics