Q40 AC Voltage Series Sensor Product Manual

Original Instructions
p/n: 121515 Rev C
13-May-26
© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Contents

Chapter 1 Features 3
Models 3

Chapter 2 Fixed-Field Mode Overview 5
Fixed-Field Sensing Theory of Operation 5

Chapter 3 Installation 6
Sensing Reliability 6
Background Reflectivity and Placement 6
Color Sensitivity 7
Wiring Diagrams 7

Chapter 4 Specifications 8
Dimensions 9
Performance Curves 9

Chapter 5 Product Support and Maintenance 11
Quick-Disconnect (QD) Cables 11
Repairs and Translations (No Field-Replaceable Parts) 11
Discontinued Models 14
Contact Us 15
Banner Engineering Corp Limited Warranty 15

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Chapter Contents

Models 3

Chapter 1 Features

Self-contained, AC-operated sensors



- Featuring EZ-BEAM® technology for reliable sensing without the need for adjustments
- Rectangular 40 mm plastic housing with 30 mm threaded mounting base in opposed, retroreflective or fixed-field modes
- Completely epoxy-encapsulated to provide superior durability, even in harsh sensing environments rated to IP69K
- Innovative dual-indicator system for simple sensor performance monitoring
- 20 to 250 V AC (3-wire hookup); SPST solid-state switch output, maximum load 300 mA

WARNING:

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

Models

Opposed mode models

Model	Range	Output	Connection
Q403E	60 m (200 ft)	-	2 m (6.5 ft) cable
Q403EQ1			4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40AW3R		LO	2 m (6.5 ft) cable
Q40AW3RQ1		LO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40RW3R		DO	2 m (6.5 ft) cable
Q40RW3RQ1		DO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect

Polarized retroreflective mode models

Model	Range	Output	Connection
Q40AW3LP	6 m (20 ft)	LO	2 m (6.5 ft) cable
Q40AW3LPQ1		LO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40RW3LP		DO	2 m (6.5 ft) cable
Q40RW3LPQ1		DO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40RW3LPQ3		DO	5-pin M12 male quick disconnect

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Fixed-field mode models

Model	Range	Output	Connection
Q40AW3FF200	200 mm (8 in) cutoff	LO	2 m (6.5 ft) cable
Q40AW3FF200Q1		LO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40RW3FF200Q1		DO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40AW3FF400	400 mm (16 in) cutoff	LO	2 m (6.5 ft) cable
Q40AW3FF400Q1		LO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40AW3FF400Q4		LO	
Q40RW3FF400		DO	2 m (6.5 ft) cable
Q40RW3FF400Q1		DO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40AW3FF600	600 mm (24 in) cutoff	LO	2 m (6.5 ft) cable
Q40AW3FF600 W/30		LO	9 m cable
Q40AW3FF600Q1		LO	4-pin 1/2 in-20UNF (1/2-in Dual Key) male quick disconnect
Q40RW3FF600		DO	2 m (6.5 ft) cable
Q40RW3FF600Q1		DO	4-pin 1/2 in-20UNF (1/2-in Dual Key) 2 male quick disconnect

A model with a QD connector requires a mating cable.

For a list of discontinued models, see Discontinued Models.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Fixed-Field Sensing Theory of Operation 5

Chapter 2 Fixed-Field Mode Overview

Q40 self-contained fixed-field sensors are small, powerful, infrared diffuse mode sensors with far-limit cutoff (a type of background suppression). Their high excess gain and fixed-field technology allow the detection of objects of low reflectivity while ignoring background surfaces.


The cutoff distance is fixed. Backgrounds and background objects must always be placed beyond the cutoff distance.

Fixed-Field Sensing Theory of Operation

The Q40 Series Sensor compares the reflections of its emitted light beam (E) from an object back to the sensor's two differently aimed detectors, R1 and R2. See "Figure: Fixed-Field Concept" on page 5. If the near detector's (R1) light signal is stronger than the far detector's (R2) light signal (see object A in the Figure below, closer than the cutoff distance), the sensor responds to the object. If the far detector's (R2) light signal is stronger than the near detector's (R1) light signal (see object B in the Figure below, beyond the cutoff distance), the sensor ignores the object.


The cutoff distance for the Q40 is fixed at 200, 400, or 600 mm (8, 16, or 24 inches). Objects lying beyond the cutoff distance are usually ignored, even if they are highly reflective. However, under certain conditions, it is possible to falsely detect a background object (see "Background Reflectivity and Placement" on page 6).

Fixed-Field Concept

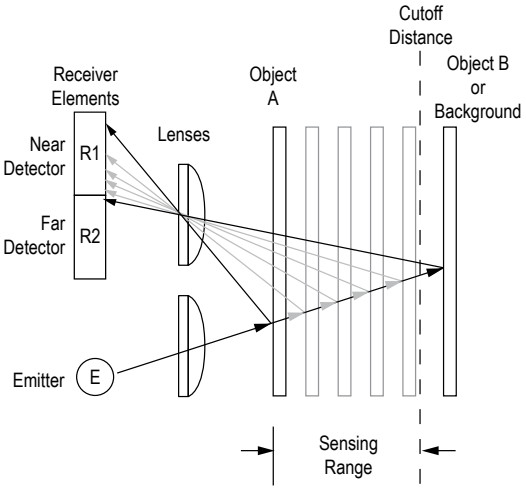

Object is sensed if amount of light at R1 is greater than the amount of light at R2

Fixed-Field Sensing Axis

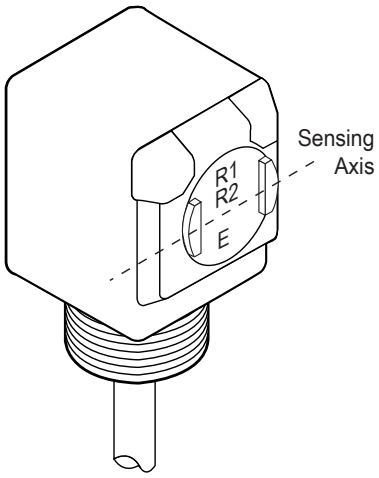

In the drawings and information provided in this document, the letters E, R1, and R2 identify how the sensor's three optical elements (Emitter "E", Near Detector "R1", and Far Detector "R2") line up across the face of the sensor. The location of these elements defines the sensing axis, see "Figure: Fixed-Field Sensing Axis" on page 5.

The sensing axis becomes important in certain situations, such as when the object is beyond the cutoff distance as shown in "Background Reflectivity and Placement" on page 6.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Sensing Reliability 6
Background Reflectivity and Placement 6
Color Sensitivity 7
Wiring Diagrams 7

Chapter 3 Installation

Sensing Reliability


For the highest sensitivity, position the target for sensing at or near the point of maximum excess gain. Maximum excess gain for all models occurs at a lens-to-object distance of about 40 mm (1.5 in). Sensing at or near this distance makes maximum use of each sensor's available sensing power. The background must be placed beyond the cutoff distance. Note that the reflectivity of the background surface also may affect the cutoff distance. Following these guidelines improves sensing reliability.

Background Reflectivity and Placement


Avoid mirror-like backgrounds that produce specular reflections. A false sensor response occurs if a background surface reflects the sensor's light more to the near detector (R1) than to the far detector (R2). The result is a false ON condition ("Figure: Reflective Background - Problem" on page 6). Correct this problem by using a diffusely reflective (matte) background or angling either the sensor or the background (in any plane) so the background does not reflect light back to the sensor ("Figure: Reflective Background - Solution" on page 6). Position the background as far beyond the cutoff distance as possible.

An object beyond the cutoff distance, either stationary (and when positioned as shown in "Figure: Object Beyond Cutoff - Problem" on page 7), or moving past the face of the sensor in a direction perpendicular to the sensing axis, may cause unwanted triggering of the sensor if more light is reflected to the near detector than to the far detector. Correct the problem by rotating the sensor 90° ("Figure: Object Beyond Cutoff - Solution" on page 7). The object then reflects the R1 and R2 fields equally, resulting in no false triggering. A better solution, if possible, may be to reposition the object or the sensor.

Reflective Background - Problem

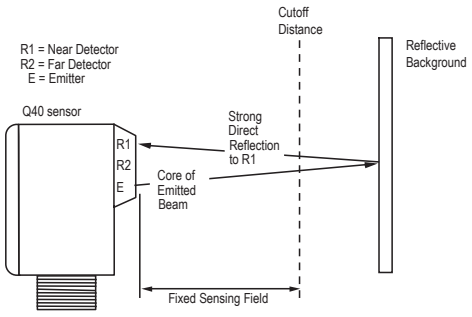

Reflective Background - Solution

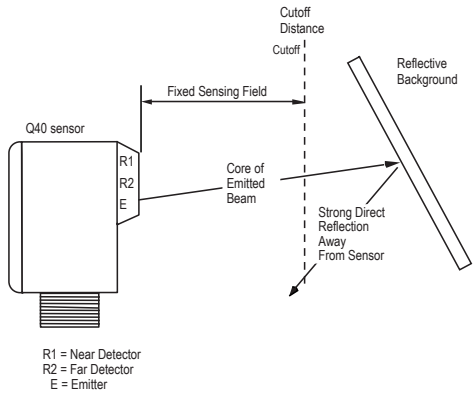


Continued on page 7

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


Continued from page 6

Object Beyond Cutoff - Problem

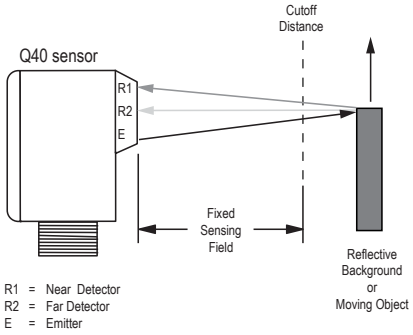

A reflective background object in this position or moving across the sensor face in this axis and direction may cause a false sensor response.

Object Beyond Cutoff - Solution

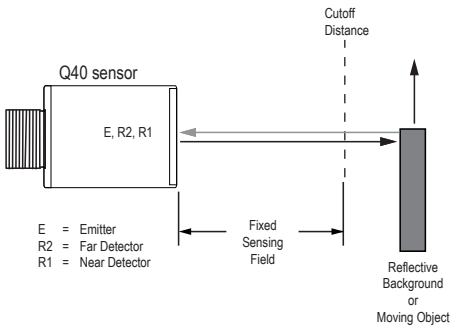

A reflective background object in this position or moving across the sensor face in this axis is ignored.

Color Sensitivity


The effects of object reflectivity on cutoff distance, though small, may be important for some applications. It is expected that at any given cutoff setting, the actual cutoff distance for lower reflectance targets is slightly shorter than for higher reflectance targets. This behavior is known as color sensitivity.

For example, an excess gain of 1 for an object that reflects 1/10 as much light as the 90% white card is represented by the horizontal graph line at excess gain = 10. An object of this reflectivity results in a far-limit cutoff of approximately 190 mm (7.5 in) for the 200 mm (8 in) cutoff model, for example; and 190 mm represents the cutoff for this sensor and target.


These excess gain curves were generated using a white test card of 90% reflectance. Objects with reflectivity of less than 90% reflect less light back to the sensor and thus require proportionately more excess gain to be sensed with the same reliability as more reflective objects. When sensing an object of very low reflectivity, it may be essential to sense it at or near the distance of maximum excess gain.

Wiring Diagrams

Cabled emitters

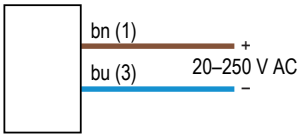


All other cabled models

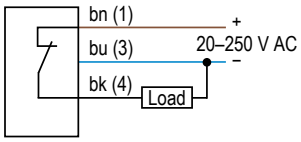


Key

1 = Brown
3 = Blue
4 = Black


QD Emitters (4-pin 1/2 in-20UNF (1/2-in Dual Key))

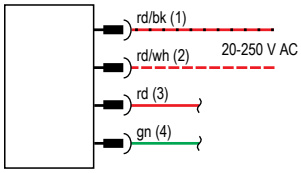

All Other QD Models (4-pin 1/2 in-20UNF (1/2-in Dual Key))

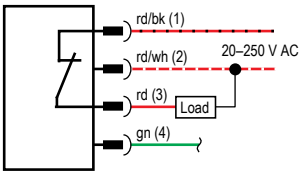

4-pin 1/2 in-20UNF (1/2-in Dual Key) male pinout

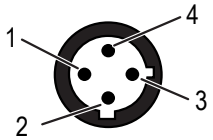

Key

1 = Red/Black
2 = Red/White
3 = Red
4 = Green

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Dimensions 9
Performance Curves 9

Chapter 4 Specifications

Supply Voltage and Current

20 V AC to 250 V AC (50/60 Hz).

Average current: 20 mA

Peak current: 200 mA at 20 V AC, 500 mA at 120 V AC, 750 mA at 250 V AC

Supply Protection Circuitry

Protected against transient voltages

Output Configuration

SPST solid-state ac switch; Three-wire hookup; Choose light operate or dark operate models

Light Operate: N.O. output conducts when the sensor sees its own (or the emitter's) modulated light

Dark Operate: Output conducts when the sensor sees dark

Sensing Beam

Opposed mode models: Infrared, 950 nm

Polarized retroreflective mode models: Visible red, 680 nm

Fixed-field mode models: Infrared, 880 nm

Output Rating

300 mA maximum (continuous)

Fixed-Field models: derate 5 mA/°C above +50°C (122°F)

Inrush Capability: 1 amp for 20 milliseconds, non-repetitive

OFF-state leakage current: < 100 microamps

ON-state saturation voltage: 3 V at 300 mA ac; 2 V at 15 mA ac

Output Response Time

Opposed mode: 16 milliseconds ON, 8 milliseconds OFF

Other models: 16 milliseconds ON and OFF

NOTE: 100 ms delay on power-up

Repeatability

Opposed mode: 2 milliseconds

Other modes: 4 milliseconds

Repeatability and response are independent of signal strength

Indicators

Two LEDs (Green and Amber)

Green ON: power to the sensor is ON

Amber ON: sensor sees light

Amber flashing: excess gain marginal (1 to 1.5x) in light conditions

Connections

2 m (6.5 ft) cable, 9 m (30 ft) cable, or 4-pin 1/2 in-20UNF (1/2-in Dual Key) quick-disconnect fitting, depending on the model

Construction

PBT polyester housing; polycarbonate (opposed mode) or acrylic lens

Environmental Rating

Leakproof design rated NEMA 6P, DIN 40050 (IP69K per ISO 20653)

Operating Conditions

Temperature: –40 °C to +70 °C (–40 °F to +158 °F)

90% at +50 °C maximum relative humidity (non-condensing)

Vibration and Mechanical Shock

All models meet MIL-STD-202F, Method 201A (Vibration: 10 Hz to 60 Hz maximum, 0.06 inch (1.52 mm) double amplitude, 10G acceleration) requirements. Method 213B conditions H&I. Shock: 75G with device operating; 100G for non-operation

Certifications

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

Turck Banner LTD Blenheim House
Blenheim Court
Wickford, Essex SS11 8YT
GREAT BRITAIN

Required Overcurrent Protection

WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.


For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (A)	Supply Wiring (AWG)	Required Overcurrent Protection (A)
20	5.0	26	1.0
22	3.0	28	0.8
24	2.0	30	0.5


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Dimensions

Cabled models

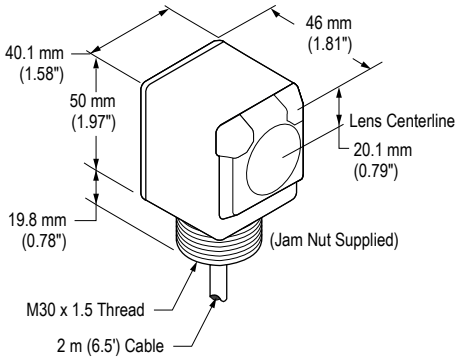

QD models

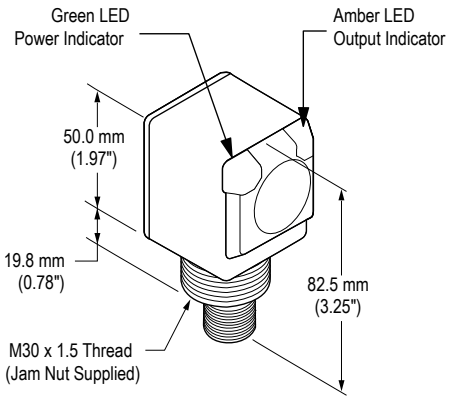


All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.


Performance Curves

Opposed mode sensors

Excess gain

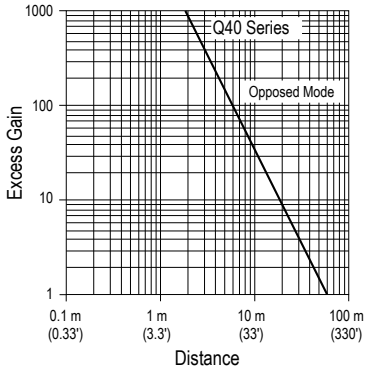

Beam pattern

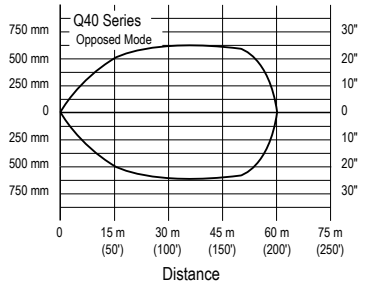


Performance based on use of a model BRT-3 retroreflector (3" diameter). Actual sensing range may be more or less than specified, depending on the efficiency and reflective area of the retroreflector used.


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Polarized retroreflective mode sensors

Excess gain

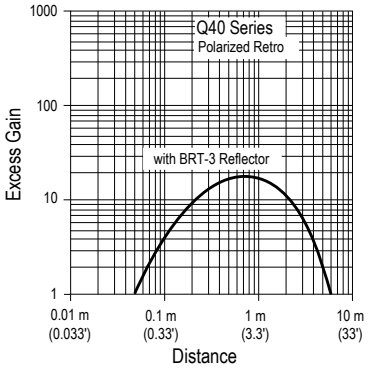


Beam pattern

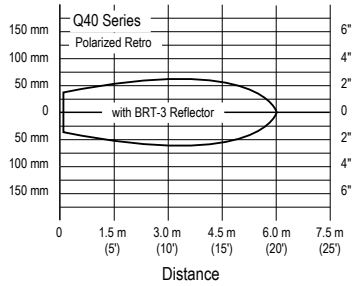

Performance based on use of a 90% reflectance white test card.† Focus and spot sizes are typical.

Fixed-field mode sensors

200 mm range

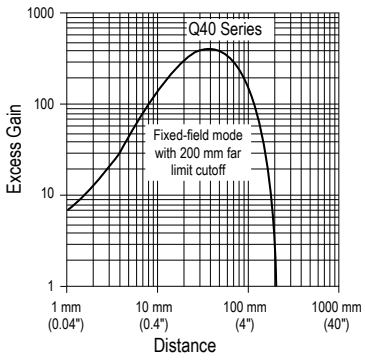


Ø 16 mm spot size @ 35 mm focus

Ø 20 mm spot size @ 200 mm cutoff

† Using 18% gray test card: Cutoff distance will be 95% of value shown.

† Using 6% black test card: Cutoff distance will be 90% of value shown.

400 mm range

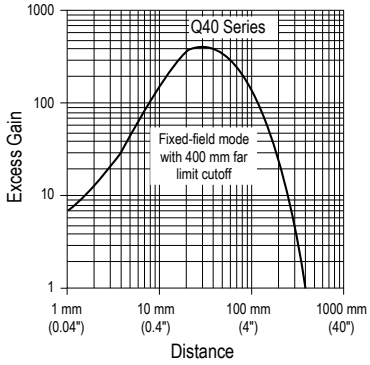


Ø 17 mm spot size @ 35 mm focus

Ø 25 mm spot size @ 400 mm cutoff

† Using 18% gray test card: Cutoff distance will be 90% of value shown.

† Using 6% black test card: Cutoff distance will be 85% of value shown.

600 mm range

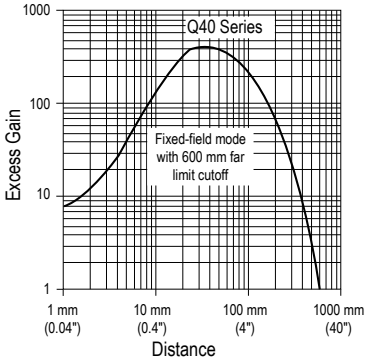

Ø 17 mm spot size @ 35 mm focus

Ø 30 mm spot size @ 600 mm cutoff

† Using 18% gray test card: Cutoff distance will be 85% of value shown.

† Using 6% black test card: Cutoff distance will be 75% of value shown.



© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Quick-Disconnect (QD) Cables 11
Repairs and Translations (No Field-Replaceable Parts) 11
Discontinued Models 14
Contact Us 15
Banner Engineering Corp Limited Warranty 15

Chapter 5 Product Support and Maintenance

Quick-Disconnect (QD) Cables

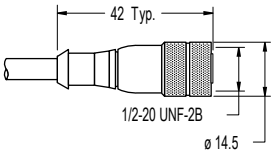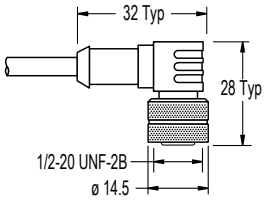4-Pin Single-Ended 1/2-in Dual Key Female Cordsets				
Model	**Length**	**Style**	**Dimensions**	**Pinout (Female)**
MQAC-406	2 m (6.56 ft)	Straight		 1 = Red/Black 2 = Red/White 3 = Red 4 = Green
MQAC-415	5 m (16.4 ft)			
MQAC-430	9.14 m (30 ft)			
MQAC-406RA	1.83 m (6 ft)	Right-Angle		
MQAC-415RA	5 m (16.4 ft)			
MQAC-430RA	9.14 m (30 ft)			

Repairs and Translations (No Field-Replaceable Parts)

English

Contact Banner Engineering for troubleshooting of this device. **Do not attempt any repairs to this Banner device; it contains no field-replaceable parts or components.** If the device, device part, or device component is determined to be defective by a Banner Applications Engineer, they will advise you of Banner's RMA (Return Merchandise Authorization) procedure.

```
IMPORTANT: If instructed to return the device, pack it with care. Damage that occurs in return
shipping is not covered by warranty.
```

Obtain assistance with product repairs by contacting your local Banner Engineering Corp distributor or by calling Banner directly at (763) 544-3164. Access literature translated into your native language on the Banner website at www.bannerengineering.com or contact Banner directly at (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Deutsch

Wenden Sie sich zur Fehlerbehebung dieses Geräts an Banner Engineering. **Versuchen Sie nicht, Reparaturen an diesem Banner-Gerät vorzunehmen. Das Gerät enthält keine am Einsatzort auszuwechselnden Teile oder Komponenten.** Wenn ein Banner-Anwendungstechniker zu dem Schluss kommt, dass dieses Gerät, ein Teil oder eine Komponente davon defekt ist, erhalten Sie von dem Techniker Erläuterungen zu Banners RMA-Verfahren (Return Merchandise Authorization) für die Warenrückgabe.

```
WICHTIG: Wenn Sie der Techniker anweist, das Gerät zurückzusenden, verpacken Sie es bitte
sorgfältig. Transportschäden bei der Rücksendung werden von der Garantie nicht abgedeckt.
```

Unterstützung bei Produktreparaturen erhalten Sie von Ihrem örtlichen Banner Engineering Corp Händler oder direkt von Banner unter Tel. (763) 544-3164. Die in Ihre Muttersprache übersetzte Literatur finden Sie auf der Banner-Website unter www.bannerengineering.com oder kontaktieren Sie Banner direkt unter Tel. (763) 544-3164.

Français

Pour plus d’informations sur le dépannage du produit, contactez Banner Engineering. **Ne tentez pas de réparer ce dispositif Banner. Il ne contient aucun composant ou pièce qui puisse être remplacé sur place.** Si un ingénieur de Banner conclut que le dispositif ou l'une de ses pièces ou composants est défectueux, il vous informera de la procédure à suivre pour le retour des produits (RMA).

```
Important : Si vous devez retourner le dispositif, emballez-le avec soin. Les dégâts
occasionnés pendant le transport de retour ne sont pas couverts par la garantie.
```

Pour vous aider lors de la réparation de produits, contactez votre distributeur Banner local our appelez directement Banner au (763) 544-3164. La documentation traduite dans votre langue est disponible sur le site internet de Banner www.bannerengineering.com ou contactez directement Banner au (763) 544-3164.

Italiano

Per le procedure di individuazione e riparazione dei guasti di questo dispositivo, contattare Banner Engineering. **Non tentare di riparare questo dispositivo Banner, in quanto non contiene parti o componenti sostituibili dall’utente.** Se il dispositivo, una parte del dispositivo o un componente del dispositivo viene riscontrato difettoso da un tecnico Banner, il nostro personale vi comunicherà la procedura da seguire per ottenere l'autorizzazione al reso.

```
Importante: Se si ricevono istruzioni di rispedire il dispositivo al produttore, imballarlo con
cura. I danni dovuti al trasporto non sono coperti dalla garanzia.
```

Per assistenza nelle riparazioni dei prodotti, contattare il distributore locale Banner Engineering Corp o contattare direttamente Banner al numero (763) 544-3164. È possibile accedere alla documentazione tradotta nella propria lingua madre sul sito Web Banner all'indirizzo www.bannerengineering.com o contattare direttamente Banner al numero (763) 544-3164.

Español

Comuníquese con Banner Engineering para solucionar de problemas de este dispositivo. **No intente ninguna reparación a este dispositivo de Banner, contiene piezas o componente que no se pueden cambiar en terreno.** Si algún ingeniero de aplicaciones de Banner determina que el dispositivo, alguna de las piezas o alguno de los componentes del dispositivo está defectuoso, le informará el procedimiento de autorización de devolución de mercancía (RMA, por sus siglas en inglés) de Banner.

```
Importante: Si se le solicita devolver el dispositivo, empáquelo con cuidado. Puede haber daños
durante el envío de devolución que no estén cubiertos por la garantía.
```

Para reparaciones de productos, por favor contacte a su distribuidor local de Banner Engineering o llame a Banner directamente al 00 1 (763) 544-3164. Vea la literatura traducida en su idioma en el sitio web Banner en www.bannerengineering.com o comuníquese con Banner directamente al 00 1 (763) 544-3164.

中国人

如需对本装置进行故障排查，请联系邦纳。**请勿尝试自行维修该邦纳装置；本装置不包含任何可在现场更换的部件或组件。** 若经邦纳应用工程师确认设备、设备部件或组件存在缺陷，他们将告知您邦纳退货授权 (RMA) 流程。

```
重要注意事项：如被要求退回装置，请妥善包装后寄回。退货运输过程中发生的损坏不在保修范围内。
```

请联系当地的 Banner Engineering Corp 经销商或直接致电 Banner +1 (763) 544-3164，以获得产品维修帮助。请访问邦纳网站 www.bannerengineering.com 或直接拨打 +1 (763) 544-3164 联系邦纳，获取翻译成您母语的资料。

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

한국인

이 장치의 문제를 해결하려면 Banner Engineering에 문의하십시오. **이 Banner 장치에는 현장에서 교체할 수 있는 부품 또는 구성품이 없으므로 수리를 시도하지 마십시오.** Banner 애플리케이션 엔지니어가 장치, 장치 부품 또는 장치 구성품에 결함이 있는 것으로 판정하면, Banner의 RMA(제품 반송 승인)절차에 대해 안내해 드립니다.

중요: 제품을 반송하도록 안내 받으셨다면 잘 포장해주십시오. 반송 도중에 발생한 손상은 보증 서비스가 적용되지 않습니다.

제품 수리에 대한 지원은 지역 Banner Engineering Corp 대리점에 문의하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다. 사용자의 모국어로 번역된 자료는 Banner 웹사이트 www.bannerengineering.com에서 액세스하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다.

日本語

この装置のトラブルシューティングについては、バナーエンジニアリングにお問い合わせください。**このバナー装置には、現場では交換できない部品またはコンポーネントが含まれているため、修理を試みてはいけません。** バナーのアプリケーションエンジニアが装置、装置の部品、または装置のコンポーネントに欠陥があると判断した場合、バナーのRMA（返品承認）手続きについてお知らせします。

重要 ： 返品を指示された場合は、装置を丁寧に梱包してください。返品時に発生した破損は保証の対象外となります。

製品の修理については、最寄りのBanner Engineering Corp代理店にお問い合わせいただくか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。バナーのウェブサイト（www.bannerengineering.com）でお客様の言語に翻訳された資料にアクセスするか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。

čeština

Pro řešení problémů se zařízením kontaktujte společnost Banner Engineering. **Neprovádějte žádné opravy zařízení Banner. Neobsahují žádné komponenty nebo části, které by byly vyměnitelné.** Pokud je zařízení, jeho část nebo díl označen technikem společnosti Banner jako poškozený, bude Vám doporučeno vyplnit reklamační RMA protokol.

Důležité: Pokud byl vydán požadavek na vrácení zařízení, pečlivě ho zabalte. Poškození vzniklé při dopravě není považováno za záruční opravu.

Pokud produkt potřebuje opravu, vyžádejte si pomoc od místního distributora společnosti Banner Engineering Corp nebo přímo na telefonním čísle (763) 544-3164. Dokumentaci přeloženou do vašeho jazyka si vyhledejte na webových stránkách společnosti Banner na adrese www.bannerengineering.com nebo se obraťte přímo na společnost Banner na telefonním čísle (763) 544-3164.

Polski

W celu rozwiązania problemów z urządzeniem należy skontaktować się z działem technicznym firmy Banner Engineering. **Pod żadnym pozorem nie próbuj naprawiać tego urządzenia firmy Banner; nie zawiera ono części ani elementów, które można wymieniać samodzielnie.** Jeśli urządzenie, jego część lub element zostaną uznane za wadliwe przez inżyniera technicznego Banner, poinformuje on użytkownika o firmowej procedurze zwrotu towaru (RMA) firmy Banner.

Ważne: Jeśli urządzenie ma zostać zwrócone, należy je starannie zapakować. Uszkodzenia powstałe podczas odsyłki nie są objęte gwarancją.

Aby uzyskać pomoc w zakresie naprawy produktu, należy skontaktować się z lokalnym dystrybutorem Banner Engineering Corp lub zadzwonić bezpośrednio do firmy Banner pod numer (763) 544-3164. Dostęp do literatury przetłumaczonej na swój język ojczysty można uzyskać na stronie internetowej firmy Banner pod adresem www.bannerengineering.com lub kontaktując się bezpośrednio z firmą Banner pod numerem (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Português

Entre em contato com a Engenharia da Banner para a solução de problemas deste dispositivo. **Não tente fazer nenhum reparo neste dispositivo Banner; ele não contém peças ou componentes substituíveis em campo.** Se um técnico de aplicações da Banner determinar que o dispositivo, peça ou componente do dispositivo está com defeito, ele o informará sobre o procedimento de RMA (Autorização de Devolução de Mercadoria) da Banner.

Importante: Se for instruído a devolver o dispositivo, embale-o com cuidado. Os danos ocorridos no transporte de devolução não são cobertos pela garantia.

Obtenha assistência para reparos do produto entrando em contato com o distribuidor local da Banner Engineering Corp ou ligando diretamente para a Banner no telefone (763) 544-3164. Acesse a literatura traduzida para seu idioma nativo no site da Banner em www.bannerengineering.com ou entre em contato diretamente com a Banner pelo telefone (763) 544-3164.

Türkçe

Bu cihazda sorun giderme işlemleri için Banner Engineering ile iletişime geçin. **Bu Banner cihazını onarmaya çalışmayın; cihaz sahada değiştirilebilir parça veya bileşen içermez.** Bir Banner Uygulama Mühendisi tarafından cihazın, cihazın bir parçasının veya bir cihaz bileşeninin kusurlu olduğu tespit edilirse, Banner RMA (İade Mal Yetkilendirme) prosedürü hakkında bilgilendirilirsiniz.

ÖNEMLİ: İade etmeniz istenirse, cihazı dikkatli bir şekilde paketleyin. İade nakliyesinde meydana gelecek hasarlar garanti kapsamında değildir.

Yerel Banner Engineering Corp distribütörünüzle iletişime geçerek veya doğrudan (763) 544-3164 numaralı telefondan Banner'ı arayarak ürün onarımlarıyla ilgili yardım alın. Ana dilinize çevrilmiş dokümanlara www.bannerengineering.com adresindeki Banner web sitesinden erişebilir veya (763) 544-3164 numaralı telefondan doğrudan Banner ile iletişime geçebilirsiniz.

Discontinued Models

The following models are no longer available for order but are still covered by the information in this document.

Inactive opposed mode models

Model	Range	Output	Connection
Q403E W/30	60 m (200 ft)	-	9 m cable
Q403EQ3		-	5-pin M12 male quick disconnect
Q40AW3R W/30		LO	9 m cable
Q40AW3RQ3		LO	5-pin M12 male quick disconnect
Q40RW3R W/30		DO	9 m cable
Q40RW3RQ3		DO	5-pin M12 male quick disconnect

Inactive polarized retroreflective mode models

Model	Range	Output	Connection
Q40AW3LP W/30	6 m (20 ft)	LO	9 m cable
Q40AW3LPQ3		LO	5-pin M12 male quick disconnect
Q40RW3LP W/30		DO	9 m cable

Discontinued fixed-field mode models

Model	Range	Output	Connection
Q40AW3FF200 W/30	200 mm (8 in) cutoff	LO	9 m cable
Q40AW3FF200Q3		LO	5-pin M12 male quick disconnect

Continued on page 15

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 14

Model	Range	Output	Connection
Q40RW3FF200		DO	2 m (6.5 ft) cable
Q40RW3FF200 W/30		DO	9 m cable
Q40RW3FF200Q3		DO	5-pin M12 male quick disconnect
Q40AW3FF400 W/30	400 mm (16 in) cutoff	LO	9 m cable
Q40AW3FF400Q3		LO	5-pin M12 male quick disconnect
Q40RW3FF400 W/30		DO	9 m cable
Q40RW3FF400Q3		DO	5-pin M12 male quick disconnect
Q40RW3FF600 W/30	600 mm (24 in) cutoff	DO	9 m cable

Contact Us

Banner Engineering Corp. | 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

LinkedIn

X

Facebook

Instagram



© 2026. All rights reserved.