LCD Digital Timers

LE4S Series

INSTRUCTION MANUAL

TCD220045AD

Autonics

Thank you for choosing our Autonics product.
Be sure to read and fully understand the instruction manual and other manuals before using the product.
For your safety, read and follow the safety precautions, warnings, cautions, and handling instructions listed in the instruction manual, other manuals, and the Autonics website.
Keep this document in a location where it can be easily accessed.

Visit the Autonics website (www.autonics.com or QR code) for the latest information. Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

Safety Precautions

- 'Safety Precautions' are provided to ensure safe and proper use of the product and to prevent accidents or hazards. Please make sure to follow them carefully.
- ⚠ symbol indicates a caution, warning of potential hazards under certain conditions.

⚠ Warning Failure to follow instructions may result in serious injury or death.


01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
02. Do not use or store the unit in the place where flammable/explosive/ corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.
Failure to follow this instruction may result in explosion or fire.
03. Install on a device panel to use.
Failure to follow this instruction may result in fire or electric shock.
04. Do not connect, repair, or inspect the unit while connected to a power source.
Failure to follow this instruction may result in fire or electric shock.
05. Check 'Connections' before wiring.
Failure to follow this instruction may result in fire.
06. Do not disassemble or modify the unit.
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution Failure to follow instructions may result in injury or product damage.

01. When connecting the power/sensor input and relay output, use AWG 20 (0.50 mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.
Failure to follow this instruction may result in malfunction due to contact failure.
02. Use the unit within the rated specifications.
Failure to follow this instruction may result in fire or product damage.
03. Use a dry cloth to clean the unit, and do not use water or organic solvent.
Failure to follow this instruction may result in fire or electric shock.
04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.
Failure to follow this instruction may result in fire or product damage.

Cautions During Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- In order to block peripheral current, use isolation transformer which of secondary part is not grounded to supply power to the external input device.

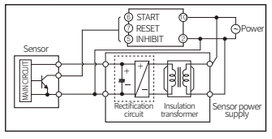

- Do not connect two or more timers with only one input contact or transistor simultaneously.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
  Do not use near the equipment which generates strong magnetic force or high frequency noise.
- LCD performance may vary depending on the usage environment. Check the environmental conditions, and do not install the device in places where direct sunlight or high temperatures may be present.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website.

LE4S ❶


❶ Output
No mark: Time limit 1c
A: Time limit 2c, Time limit 1c + Instantaneous 1c

Product Components


- Product (+ bracket)
- Instruction manual

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

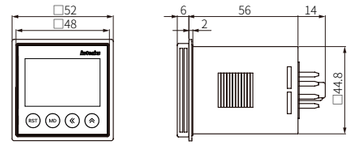


■ Bracket

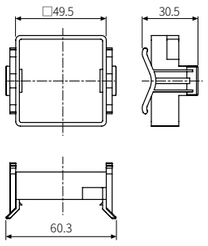

■ Panel cut-out

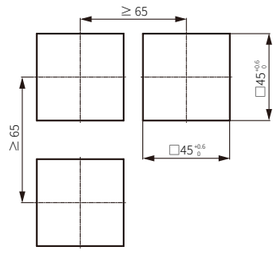

Unit Descriptions

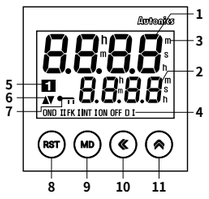

No.	Name	Function
1	Time progressing display part	Shows progressing time
2	Time setting display part	Shows the setting time
3	Time unit	Shows time unit (h: hour / m: min / s: sec) Flashing: time progressing
4	Operation mode	Shows current output operation mode • INTG: no mark
5	Output contact	Shows the status of current output contact
6	UP / DOWN	Shows UP / DOWN mode of time progressing
7	Key lock	Shows key lock status
8	[RST] key	Initializes progressing time and output return
9	[MD] key	Enter RUN mode ↔ Parameter setting Shift to next parameter in parameter setting
10	[◀] key	Enter RUN mode ↔ setting time change mode Move the digit when changing the setting value.
11	[▲] key	Change the parameter setting value

Mode Setting

RUN						RUN
	[MD] 3 sec	→	**Parameter setting**	[MD] 3 sec	→	
	[◀]	→	**Time setting** 01)	[MD]	→	
	While pressing [MD]	→	**Check output contact status** 02)	Release [MD]	→	
	[RST]	→	**Initialization**	Auto	→	

01) If no key is pressed over 60 sec, returning to RUN mode and not storing the setting value.
02) Only for the LE4SA model

Output Operation Mode

For the detailed timing chart for operation output mode, refer to the manual.
The output operation mode differs depending on each model.

Group	Output operation mode		LE4S	LE4SA	Time setting
Group 1	**OND**	ON Delay	○	○	Time
	OND.1	ON Delay 1		-	
	OND.2	ON Delay 2		○	
	INT	Interval			
	INT.1	Interval 1		-	
	OFD	OFF Delay			
	INTG	Integration time			
Group 2	**FLK**	Flicker	○	○	t.oFF, t.on
	FLK.1	Flicker 1			
	NFD	ON - OFF Delay		-	ond, oFF.d
	NFD.1	ON - OFF Delay 1			
Group 3	**S-D**	Star - Delta	-	○	t-1, t-2
	TWN	Twin			
	TWN.1	Twin 1			

Parameter Setting

- Some parameters are activated / deactivated depending on the model or setting of other parameters. Refer to the description of each parameter.
- In the parameter setting, the time and output control continue.
- If the settings are changed, all outputs to be OFF and reset the current values when returning to RUN mode.
- [MD] key: saves current setting value and moves to the next parameter.

Parameter		Display	Defaults	Setting range	Model	Display condition
1-1	Output operation mode	oUt.ñ	ond	• Refer to the output operation mode.	Comm.	-
1-2	Time range	t.rnG	99.99	• Refer to the table below.		1-1. Output operation mode: Group 1
1-3	One-shot output time	oUt.t.	00.50	0.01 to 99.99 sec		1-1. Output operation mode: OND.2
1-4	T.off time range	oF.rG	99.99	• Refer to the table below.		1-1. Output operation mode: Group 2
1-5	T.on time range	onrG	99.99			
1-6	T1 time range	t 1rG	99.99		[LE4SA]	1-1. Output operation mode: Group 3
1-7	T2 time range	t2rG	99.99		[LE4SA]	
1-8	Time UP / DOWN	U-d	UP	UP: 0 → setting time DN: setting time → 0	Comm.	-
1-9	Min. input signal width	Int	20	1, 20 ms • Set the min. width of RESET, START, INHIBIT input signals	[LE4S]	-
1-10	Output contact 01)	Cont	1C.1C	1C.1C: Time limit 1c + Instantaneous 1c 2C: Time limit 2c	[LE4SA]	-
1-11	Backlight	bLU	on	ON, OFF	Comm.	-
1-12	Key lock	LoCK	L.oFF	L.OFF: release key lock LOC.1: lock [RST] key LOC.2: lock [◀], [▲] key LOC.3: lock [RST], [◀], [▲] key	[LE4S]	-
			LoC.1		[LE4SA]	

01) 1-1. Output operation mode of group 3: 2C fixed

• [Table]


Unit	SEC	SEC	SEC	SEC	M S	M	M
Display	9.999	99.99	999.9	9999	99m59s	999.9m	9999m
Range	0.001s to 9.999s	0.01s to 99.99s	0.1s to 999.9s	1s to 9999s	0m1s to 99m99s	0.1m to 999.9m	1m to 9999m

Unit	H M	H	H	H
Display	99h59m	99.99h	999.9h	9999h
Range	0h1m to 99h59m	0.01h to 99.99h	0.1h to 999.9h	1h to 9999h

Connections


⚠ Caution
- Refer to the 'specifications' for checking the power supply and control output.
- The LE4S model: Be sure to use terminal No. 2 as the common terminal to connect terminals No. 1, 3, and 4.
  Failure to follow this instruction may result in product malfunction.

■ LE4S

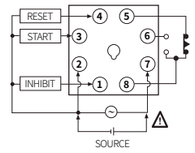


■ LE4SA

- Output operation mode
  : OND / OND.2 / FLK / FLK.1 / INT / TWN / TWN.1 (TWN, TWN.1 mode: time limit 2c fixed)

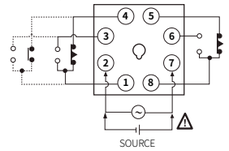

- Output operation mode
  : Y - Δ (Time limit 2c fixed)
- Use the A contact.

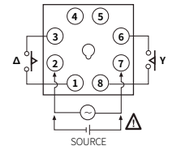

Specifications

Model		LE4S	LE4SA
Function		MULTI time, MULTI operation	
Display method		LCD (Backlight)	
Return time		≤ 100 ms	
Time operation		Signal ON Start	Power ON Start
Input signal		START, INHIBIT, RESET	
Min. signal width		≈ 1, 20 ms	-
No-voltage input		Short-circuit impedance: ≤ 1 kΩ Short-circuit residual voltage : ≤ 0.5 VDC⎓ Open-circuit impedance : ≥ 100 kΩ	-
Control output		Relay	
Contact type		Time limit SPDT (1c)	Time limit DPDT (2c), Time limit SPDT (1c) + Instantaneous SPDT (1c) (depends on operation mode)
Contact capacity		250 VAC~ 5 A, 30 VDC⎓ 5 A resistive load	250 VAC~ 3 A, 30 VDC⎓ 3 A resistive load
Error	Repeat	Power ON Start : ≤ ± 0.01% ± 0.05 sec Signal ON Start : ≤ ± 0.005% ±0.03 sec	≤ ± 0.01% ± 0.05 sec
	SET		
	Voltage		
	Temp.		
Certification		CE UK CA cULus EAC	
Unit weight		≈ 98 g	

Model		LE4S	LE4SA
Power supply		24 - 240 VAC~ 50 / 60 Hz, 24 - 240 VDC⎓	
Permissible voltage range		90 to 110 % of rated voltage	
Power consumption		AC: ≤ 4.5 VA, DC: ≤ 2 W	AC: ≤ 4 VA, DC: ≤ 1.6 W
Insulation resistive		100 MΩ (500 VDC⎓ megger)	
Dielectric strength		Between the charging part and the case: 3000 VAC~ at 50 / 60 Hz for 1 min	
Noise immunity		± 2 kV square-wave noise by noise simulator (pulse width 1 μs)	
Vibration		0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour	
Vibration (malfunction)		0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min	
Shock		300 m/s² (≈ 30 G) in each X, Y, Z direction for 3 times	
Shock (malfunction)		100 m/s² (≈ 10 G) In each X, Y, Z direction for 3 times	
Relay life cycle		Mechanical: ≥ 10,000,000 operations Electrical: ≥ 100,000 operations	
Ambient temperature		-10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)	
Ambient humidity		35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)	

■ Contact capacity

• IEC (EN60947-5-1)

Model		LE4S		LE4SA	
Rated current		5 A		3 A	
Rated voltage		30 V	250 V	30 V	250 V
AC	**Resistive load (AC-12)**	-	5 A	-	3 A
DC	**Resistive load (DC-12)**	5 A	-	3 A	-

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002
www.autonics.com | +82-2-2048-1577 | sales@autonics.com

Autonics